



metal framework – cross grid



If you come across an insoluble situation when installing facade tiles, not described in this manual, do not hesitate to contact us at: +420461722585, we will be happy to help.

The STAVOBLOCK facade system is manufactured in compliance with the ETAG 034 standard.

If you have purchased the integrated system, it is necessary to get the statistical calculation of anchoring from our technical advisor.

The Manufacturer is not liable for any potential damage to property or health caused by failure to follow the recommended installation manual.

# CONTENT

1.	COMPLETE SET OF FAÇADE INSTALLATION COMPONENTS	5.
	face components, steel grid components	5.
	steel grid components, heat insulation, other auxiliary equipment	6.
	recommended tools, protective equipment	7.
2.	METAL FRAMEWORK INSTALLATION - CROSS GRID	8.
	mounting methods	9.
	supporting profile length	11.
	attaching horizontal and vertical Omega bars + inserting thermal insulation	12.
	rodent protection	14.
	setting up the cross grid on steep ground	14.
3.	ENSURING AN AIR GAP	16.
	heat-insulating façade with an open and closed air gap	16.
4.	FAÇADE COMPONENTS INSTALLATION	17.
	Stavoblock façade brick installation	17.
	outer angle installation	19.
	building aperture solutions	19.
	lining installation	20.
	underside installation	21.
	sill installation / footing finish	22.
	façade brick installation on a slant surface	23.
5.	GRID VARIANTS	24.
6.	MAINTENANCE	25.
	cement efflorescence	

# **1. COMPLETE SET OF FACADE INSTALLATION COMPONENTS**



FACE COMPONENTS

FASTENERS





# **2. METAL FRAMEWORK INSTALLATION – CROSS**

Determine the vertical planeness of the façade wall using a water gauge or plumb line. The length of the supporting profiles for mounting the steel grid depends on the heat insulation thickness and on the planeness of the façade wall.

The arrangement of the supporting profiles, or threaded rods for mounting the distance grid is determined by a statistical calculation. When the statistical calculation does not determine any other dimension, the horizontal spacing of the supporting profiles / threaded rods is 600 mm and the vertical spacing is 800 mm. The first supporting profile is placed at least 100 mm above the ground /pic.2/.

Always drill holes for dowels horizontally to the wall /pic.3/



Pic.1- rule for the arrangement of supporting profiles / threaded rods on the wall surface Pic.3- holes always drilled horizontally

Pic.2- position of vertical Omega bar 20 mm above the ground

### MOUNTING METHODS

Insert dowels into the drilled holes. Screw the red part of the threaded rod /diameter 8 MM/ into the fitted dowels using the M8 tightening bit/pic. 4/- see pic. 12.

Choose a suitable type of mounting the cross spacing grid according to the required insulation t <u>tal) Omega</u>

<u>bars using:</u>

Mungo MN 12x60 dowels 8.8 Zn M8x140 mm threaded rods 2x M8 flanged nuts /pic.5/

b) When the bricks are more than 100 mm away from the wall, mount the Omega bars using: Mungo MN 12x60 dowels

- 8.8 Zn M8x200 mm (300 mm) threaded rods
- 2x M8 flanged nuts
- supporting profiles /pic.6/

When the supporting profile touches the current wall of the building, you have to insert Thermostop

- to break the thermal bridge.

Use M8 tightening bit to tighten the threaded rod /pic. 4 /.





Pic.7- supporting profiles mounted to the wall

Note: When the drilled hole for dowels is not horizontal to the wall, the threaded rod has to be bent into a horizontal position using an auxiliary tool, such as a hollow rod with a length of about 500 mm,  $\phi$  8mm /pic.9/.



Pic.8- tightening the supporting profile

Pic.9- bending the threaded rod

### SUPPORTING PROFILE LENGTHS



THREADED ROD for installation range of up to 90 mm



SUPPORTING PROFILE L70 for installation range from 91 to 160 mm



2X SUPPORTING PROFILE L70 for installation range from 161 to 230 mm



3X SUPPORTING PROFILEL70 for installation range from 231 to 300 mm



Pic.10 - the threaded rod part marked in red is to be screwed into a Mungo dowel



Pic.11 - Mungo dowel flush-mounted in the wall at full length

### **MOUNTING OMEGA BARS - CROSS GRID**

### LOAD-BEARING OMEGA BARS - horizontal

The centre-to-centre distance of horizontal Omega bars is determined by the spacing of the supporting pro files, i.e. it is 800 mm /pic.19/. Screw the horizontal Omega bars onto the mounted threaded bars using the M8 flanged nuts and adjust the required distance from the wall.

You can now insert the heat insulation. More information on how to use the air gap as insulation with sealing the air channel is provided on page 16.

#### CORNER

Attach the first vertical Omega bar 50 mm from the point of contact of two horizontal Omega bars. Connect the vertical corner bars with a 100/50 adjustable extension. The first adjustable extension is placed 500 mm above the ground, every other extension is placed at the centre-to-centre distance of 1000 mm. /pic.20/. The facing installed on the corner must always be suspended on two fixtures. Note: the lining of openings is done in the same way.

#### SUSPENDED OMEGA BARS - vertical

The distance of the first two Omega bars from the corner is always 235 mm, then continue with a <u>constant</u> <u>axial distance of vertical Omega bars 470 mm</u> / pig.20 /.



Pic.19- centre-to-centre distance of horizontal Omega bars

Pic.20- mounting vertical Omega bars



Pic.21- mounting Omega bars to the threaded rod

The basic length of an Omega bar is 2120 mm. Use the Omega bar connecting piece to connect Omega bars vertically / longitudinally. Insert the connecting piece into the "groove" at the end of the Omega bar and screw it to the other Omega bar using M8x12 lug bolts and a flanged nut /pic.24/. Spread the Omega bars from one another end-to-end and tighten the lug bolt nuts inserted onto the connecting pieces /pic.25/.



Pic.24- connecting two Omega bars with a connecting piece

Pic.25- tightening bolts

Secure the recommended protection against the collapse of the heat insulation and rodent infiltration into the façade casing with metal lathing /width according to the heat insulation thickness/- /pic.24,25/.



Pic.24- detail of attaching metal lathing to the bottom part of the Omega bar



Pic.25- detail of attaching metal lathing

### SETTING UP THE CROSS GRID ON STEEP GROUND

Facing a slant surface above a steep ground does not differ from the procedure for facing a surface above a flat ground. Screw the horizontal bars to the supporting profiles using a bolt and a flanged nut. Then, attach vertical bars to the horizontal bars and shorten the bars according to the slope so that the individual beaks maintain a horizontal level /i.e., at the water level/. The Omega bar set-off distance from the ground is 20 mm.





Pic.27- steel grid with heat insulation prepared to be tiled with bricks

# **3. ENSURING AN AIR GAP**

### DIFFUSION-OPEN HEAT-INSULATING FAÇADE WITH AN OPEN AND CLOSED AIR GAP



Pic.28- open air gap

### VENTILATED FAÇADE

Excessive moisture is removed from the façade casing to the external environment by air circulating in the air gap /pic. 28/.



Pic.29- sealed air gap

### **DIFFUSION-OPEN FAÇADE**

Excessive moisture from the façade casing goes through the facing into the external environment.

## <u>a) no air gap</u>

In this case, the insulation touches the façade bricks directly.

## b) air gap as an insulator

The air gap is used as an insulator, however, it has to be sealed properly to prevent any air flow inside.

Sealing is provided by inserting heat insulation into the

bottom part behind the first row of bricks to seal off the air channel /pic.29/.



# **4. FAÇADE COMPONENTS INSTALLATION**

### FAÇADE BRICK INSTALLATION

Bricks can be mounted using two types of bonding /pic. 30,31/.



Pic.30- facing bond

Pic.31- no-bond design – to cut

The individual rows of the facing can be "LOCKED" to the load-bearing Omega bar by bending the bottom mount of the Omega bar using side cutting pliers. That prevents any vertical movement of the facing /pic.32/. IT IS RECOMMENDED TO LOCK EVERY FIFTH AND LAST ROW /finishing/.

When laying bricks on the wall, alternate between various pallets. You achieve better identity of colour. Check the planeness during installation using the water level.

When the load-bearing grid is complete, you can lay the first row of bricks. The following rows of bricks are simply laid one on another by securing the Omega bar mount to the groove on the back of the brick. In case of locking, the bricks are inserted in a horizontal direction /pic.33/.



It is important that the bricks are properly laid to prevent penetration of rainwater into the façade casing. <u>Proper bricklaying:</u> the top brick part is the tongue and the bottom part is the groove /pic.34/. <u>Use a brick connecting piece at each contact point of bricks that is not secured with Omega bar suspension /pic.35-37/.</u>



Pic.35,36,37 - brick connecting piece connecting two adjacent bricks

## OUTER ANGLE INSTALLATION

The corner is solved by cutting two bricks at the angle of 45° using the table saw. Such cut bricks can be secured with a layer of Sikaflex cement or Mamut glue applied on the interior – behind the facing /pic. 39,40/



Pic.41- a) lining b) head-sill Pic.42- c) sill

### LINING INSTALLATION

### There are two methods for lining openings:

a) using an Omega bar (when lining is not straight)

Screw an adjustable extension using a lug bolt to the closest corner Omega bar so that the extension shape traces the corner to be tiled. <u>The centre-to-centre distance of the individual adjustable</u> <u>extensions located on the vertical Omega bar is 1000 mm.</u> Screw a vertical Omega bar using lug bolts to the other part of the adjustable extension /on the side of the lining//pic.42/.

### b) using a window profile

Mount the window profile onto the lining of the opening using a dowel and threaded rod, tighten with a flanged nut. A groove needs to be cut out on the back of the bricks that are in contact with the nut /pic.47/.

Cut the bricks that form the corner at an angle of 45°. Attach the contact area of the cut surfaces using the Mamut - glue crystal (clear).



Pic.43- lining using Omega bar

Pic.44- lining using window profile

Pic. 45- groove for the flanged nut

#### **UNDERSIDE INSTALLATION**

#### The head-sill can be mounted in two ways.

Screw an adjustable extension using a lug bolt with a nut onto the back side of the Omega bar above the opening. Mount another Omega bar onto the adjustable extension in parallel to the width of the opening using a lug bolt. Bend all the mounts of the horizontal liner Omega bar using side cutting pliers /pic. 34/. Then cut the sides of the brick that form the right angle to 45° using the angle grinder. Then, simply insert bricks from the underside, apply the Mamut glue onto the contact area and cover this part by facing on the front /pic. 46, 47/.

vertical Omega bar horizontal Omega bar lug bolt M8x12 MM with a flanged nut M8 adjustable extension Stavoblock façade brick Suspended Omega bar liner with bent mounts Pic.46- detail of the underside solution Pic.47- covered underside

a) Horizontal head-sill /pic.46, 47/

### b) Vertical head-sill - the vertical bricks are slightly offset /pic.48, 49/

Cut the required length of the Omega bar according to the opening width. Screws the Omega bar hori zontally using a lug.bolt with a nut to the vertical Omega bars above the opening. Bend all the mounts using the side cutting pliers. Then cut the sides of the brick that form the right angle to 45° using the angle grinder. Then, simply insert bricks from the underside, apply the Mamut glue onto the contact area and cover this part from the front by facing placed upright /pic.48, 49/.



### WINDOW SILL INSTALLATION / FOOTING FINISH

Screw the sill bar to the back side of the vertical Omega bar using a lug bolt and a flanged nut. Adjust the sill bar length so that it supports the entire window sill. Mount the second side of the window sill using expanding foam.



NOTE: To make the installation of the window sill easier, leave the last two rows of bricks free /pic. 50/. You can insert them after the window sill has been installed. INSTALL THE WINDOW SILL TOGETHER WITH THE SURFACE BRICK IN-STALLATION.

### FACING INSTALLATION ON A SLANT SURFACE /gabled roof/

Continue using the standard cross grid on the façade below the gabled roof /pic.52 a/. <u>A supporting grid for suspend-ing the bricks has to be created for short bricks below the slant surface.</u> Mount another Omega bar below the cross grid in parallel with the roof angle /pic.52 b/. Mount the Omega bar using a lug bolt and a flanged nut to the vertical Omega bars of the basic cross grid. Mount the supporting vertical Omega bars to the angled Omega bar /length as required to mount the facing/. Anchor the bottom part to the wall using threaded rods, attach the top part to the angled Omega bar using a lug bolt and a flanged nut. Then, continue with facing.



Pic.52- detail of facing on a slant surface

# **5. GRID VARIANTS**

When installing the Stavoblock facade, you may encounter a different type of grate in different parts of the house. As a rule, you will encounter the classic cross grate to the greatest extent, which has the axial distance of the vertical omega bars **470 mm** /Pic. 53 a/. Furthermore, at the corners and windows of the house, it is necessary to reinforce the grate - so a dense cross grate is created, which has an axial distance of vertical omega bars of **235 mm** /Pic.53 b/. In the case of a simple compressed grate, the axial distance of the vertical omega bars remains **235 mm** (horizontal omega bars are not used here) /Pic. 53 c/.



a/ classic cross grate



Pic.53-b/ dense cross grate

c/ simple compressed grate

# **6. MAINTENANCE**

- STAVOBLOCK façade does not require any coating. The façade brick is fully coloured.
- Any polluted façade surface can <u>be washed with pressure water</u>. Do not aim a stream of pressure water at one point

when cleaning, never use a rotary pressure nozzle. Use a dispersed water jet.

- In the case of cement efflorescence, clean the façade with Betoncleaner /manufactured by Stachema Kolín/ and apply the product according to the instructions /also see Cement Efflorescence below /.
- Façade can also be cleaned using dry sand blasting or brushing. Consult the procedure with the seller or manufacturer.
- To increase the resistance of façade against pollution, you can apply surface sealer coating. Always consult the intended type of varnish with the façade manufacturer.
- The façade surface may also be treated with a nano-technological multipurpose coating. The coating causes immediate reaction of most oxidizable micro-scopic particles /such as the molecules of chemical substances, dust, viruses, bacteria, spores/ with atmospheric oxygen, in which the particles are completely burned. This product is also effective against mould and algae. Information on the product is available at the façade manufacturer.
- If you need to replace one or more damaged bricks, carefully cut out the corner component in the concerned row, replace the damaged bricks with new ones, and proceed according to the instructions for installing new bricks, including the corner component.
- Use a ladder propped against a profile, e.g. polystyrene, to repair façade at height /pic. 54/
- We recommend checking the façade after the end of winter. If you find any suspicious change, do not hesitate to contact your supplier, or the manufacturer.



Pic.54- ladder propped against a profile

### **CEMENT EFFLORESCENCE**

Cement efflorescence in concrete products is not considered to be a defect and it is not a reason for complaint as the product is manufactured from natural materials bonded with cement. Cement efflorescence is only lime released from cement that washes away during rain. It is possible to use Betoncleaner for a fast and immediate elimination of cement efflorescence.



Manufacturer and supplier: STAVOBLOCK system, s.r.o., Lezník 133, 572 01 Polička The installation instructions were prepared according to the manufacturer's requirements 2017